
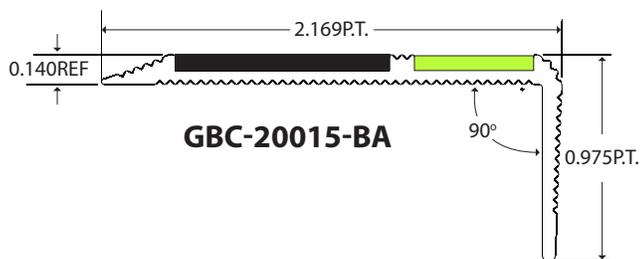


# INSTALLATION SPECIFICATIONS

## BULL NOSE STAIR NOSING

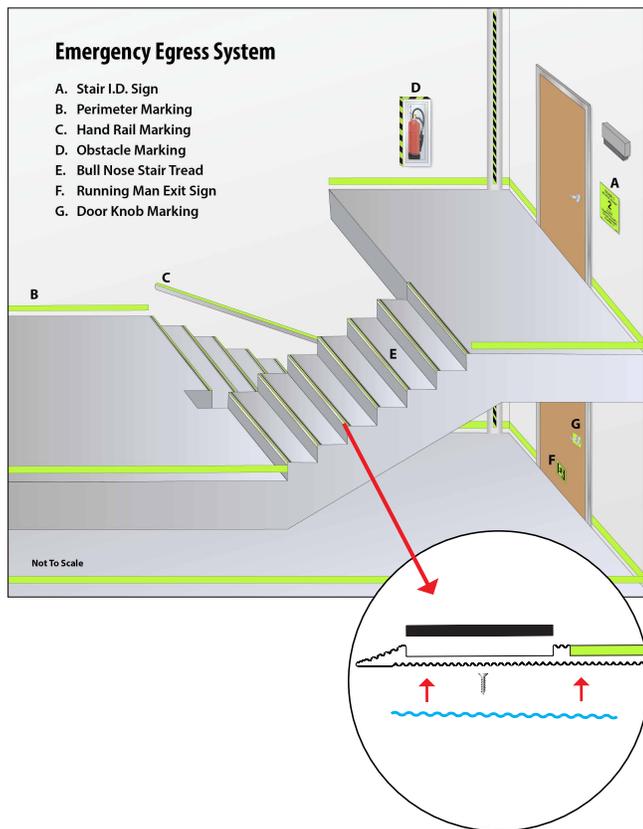

### CAN BE INSTALLED ON:

- |             |                |
|-------------|----------------|
| 1. Wood     | 6. Foam        |
| 2. Stone    | 7. Carpet      |
| 3. Concrete | 8. Metal Tread |
| 4. Marble   | 9. Drywall     |
| 5. Brick    | 10. Fiberglass |

### INSTALLATION PROCESS:

GBC's photo-luminescent Bull Nose Stair Nosing treads are typically installed on interior or exterior concrete, wood, and steel steps. Before installing, assure there are no protrusions or loose debris and ensure the surface is flat and level.

1. Prepare the surface by thoroughly cleaning with a 50/50 denatured alcohol/water solution to remove all contaminants.
2. Determine the width of the steps and cut the treads  $\frac{1}{2}$ " shorter than the maximum width (*NOTE: If installing factory pre-cut treads, verify the treads are cut to the correct length before moving on.*)
3. Apply a  $\frac{3}{8}$ " bead of *Loctite PL Premium 3x adhesive with a caulk gun*. The glue should be applied close to the edges and in a wave pattern, consistent over the entire bottom surface of the tread.
4. Carefully place the now glued tread to the surface of the step tight to the leading edge.
5. Drill a  $\frac{1}{8}$ " x 1" hole through the center of the tread no more than 16" apart and at each end of the tread and countersink (*NOTE: Skip this step if installing factory pre-drilled treads.*)
6. Install the appropriate required substrate fasteners.
7. Install the provided anti-skid strip: Cut to length, peel off the backing to the adhesive, and carefully apply to the recessed area of the tread covering up the pre-installed screws.

Allow 12-24 hours for the adhesive to fully cure and clean up any excess glue with a scraper or solvent. The installation of the photo-luminescent Bull Nose Stair Nosing is now complete.